

SCREEN UP™

Slat Screening System



Build your own privacy screens quickly and easily. Screen Up captures the natural beauty of timber with professional looking results.




- Long-life aluminium**
- Professional look**
- Quick and easy**

Proudly
Australian
Designed
& Patented

Turn over for our simple 3-step guide

easy as
1-2-3

Product Selection Guide

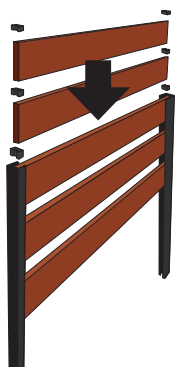


1 Select a length
1.1 metre or 2.0 metre


2 Pick a fixing option
Side fix or rear fix

3 Choose your slats
16mm or 19mm width

Channel fixing options

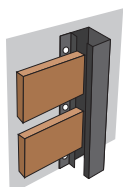

Side Fix
Side of channel
is fixed to wall.

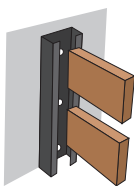

Rear Fix
Rear of channel
is fixed to wall.

Timber slat options



Most timber slats
come in either 16mm
or 19mm thickness,
and a choice of 70mm
or 90mm widths.

How many slats are required?

Use the slat calculator on our website for
different screens at different heights.

	90mm Slats	70mm Slats
2.0m high	x18	x22
1.1m high	x10	x12

Safety notes

Always wear gloves and glasses for your protection.



What you'll need


Materials

- Screen Up
- Timber slats (16 or 19mm)
- Button head screws
- Wall plugs (where required)

Tools

- Drill & screwdriver
- Tape measure
- Spirit level
- Hacksaw & timber saw

Step 1

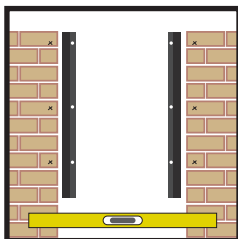

Handy Tip

Oil, paint or stain your timber slats before assembly for easier application


Measure and mark up

Position channels using a spirit level and tape measure to check.

Mark the holes with a pencil and ensure that each channel is at the right height and plumb.

If required, cut Screen Up channels to length with a hacksaw. Use the slat calculator on our website to recalculate the number of slats required.

Step 2

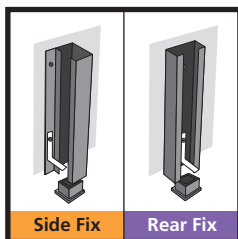

Side Fix

Rear Fix

Handy Tip

For extra strength and longer spans a vertical brace is recommended


Install Screen Up channel

Insert bottom end cap and pre-drill the marked holes. Use fixings to attach the channels.

Position 'L' bracket at bottom hole and screw into place.

Attach channels using button head screws. The flatter head provides a better fit for your slats.

Step 3

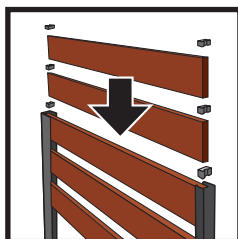

Handy Tip

To lock in slats, turn top spacer sideways and screw through hole

Finish with slats and spacers

Insert first timber slat, resting it on the 'L' bracket.

Insert spacers and timbers until you reach the top of the channel and finish with the top end cap.

Replacement spacers and 'L' brackets can be purchased separately if required.

For added privacy, build your Screen Up without spacers for a gap-free finish.

Please note:

Information in this document is a guide only and we do not warrant the accuracy or the completeness of that information. Whites Group excludes all liability in relation to the statements in this brochure.

